 


Avertum Tech-Air®

HOW TO MEASURE

- A. CHEST**
Measure around the fullest part, under the armpits, keeping the tape horizontal.
- B WAIST**
Measure around the natural waist line, inline with the navel, keeping the tape horizontal.
- C HIP**
Measure around the fullest part of your hips, about 20cm below waist line, keeping the tape horizontal.
- D ARM LENGTH**
Measure from shoulder (Humerus) to wrist.
- E HEIGHT**
Stand against a wall, ask someone else to measure from the floor to the top of your head keeping the tape vertical.

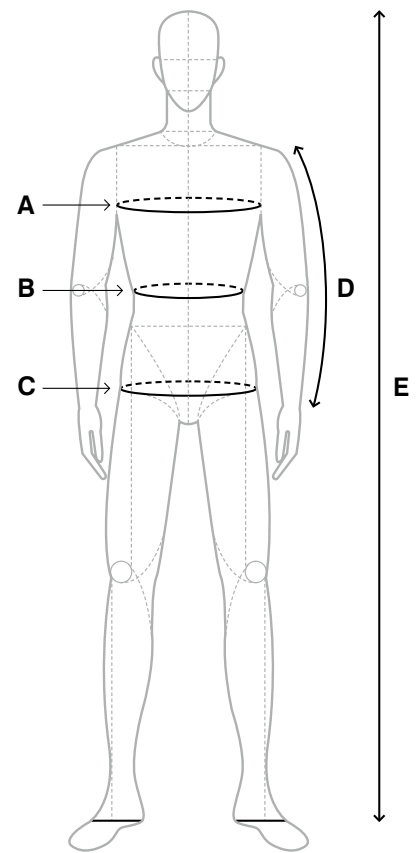


CONVERSION GUIDE			PRODUCT SIZE	BODY MEASUREMENT				
EURO SIZE	US SIZE	INTL SIZE SIZE(IN)	AVERTUM TECH-AIR®	A CHEST (CM)	B WAIST (CM)	C HIP (CM)	D OUTER ARM (CM)	E HEIGHT (CM)
40	30	XXS	XS	78-82	64-68	79-83	49-50	150-156
42	32	XXS-XS	XS	82-86	68-72	83-87	50-52	156-163
44	34	XS	S	86-90	72-76	87-91	52-54	167-171
46	36	S	S	90-94	76-80	91-95	54-56	167-171
48	38	S-M	M	94-98	80-84	95-99	56-58	171-175
50	40	M-L	M	98-102	84-88	99-103	58-60	175-179
52	42	L	L	102-106	88-92	103-107	60-62	179-183
54	44	XL	L-XL	106-110	92-96	107-111	62-64	183-187
56	46	XL-XXL	XL	110-114	96-100	111-115	64-66	187-191
58	48	XXL	XXL	114-118	100-104	115-119	66-68	191-195
60	50	3XL	3XL	118-122	104-108	119-123	66-68	191-195
62	52	3XL-4XL	3XL-4XL	122-126	112-116	127-131	68-70	195-199
64	54	4XL	4XL	126-130	112-116	127-131	68-70	195-199
66	56	5XL		130-134	116-120	131-136	68-70	195-199

SIZE CHART - LADIES

Avertum Tech-Air®

HOW TO MEASURE

 - A. CHEST**
Measure around the fullest part, under the armpits, keeping the tape horizontal.
- B BUST**
Measure around the fullest part of the bust keeping the tape parallel to the ground.
- C WAIST**
Measure around the natural waist line, inline with the navel, keeping the tape horizontal.
- D HIP**
Measure around the fullest part of your hips, about 20cm below waist line, keeping the tape horizontal.
- E ARM LENGTH**
Measure from shoulder (Humerus) to wrist.
- F HEIGHT**
Stand against a wall, ask someone else to measure from the floor to the top of your head keeping the tape vertical.

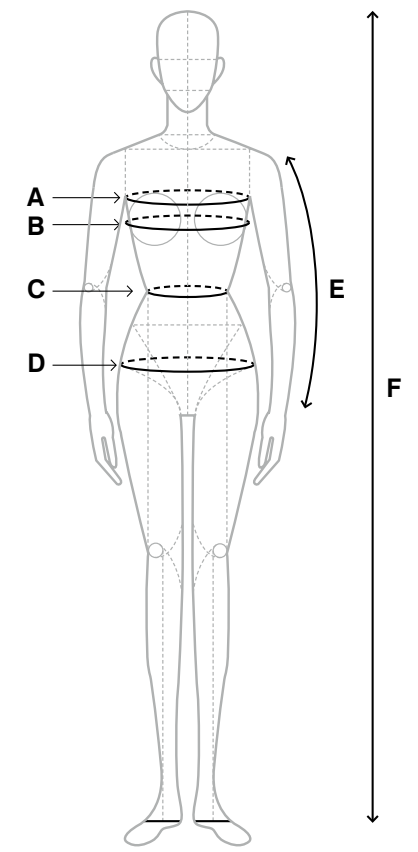

CONVERSION GUIDE			PRODUCT SIZE	BODY MEASUREMENT					
EURO SIZE	US SIZE	INTL SIZE SIZE(IN)	AVERTUM TECH-AIR®	A CHEST (CM)	B BUST (CM)	C WAIST (CM)	D HIP (CM)	E OUTER ARM (CM)	F HEIGHT (CM)
36	0	XXS		74-78	78-82	58-62	82-86	50-52	157-161
38	2	XXS-XS	XS	78-82	82-86	62-66	86-90	52-54	161-165
40	4	XS	XS	82-86	86-90	66-70	90-94	54-56	165-169
42	6	S	S	86-90	90-94	70-74	94-98	56-58	169-173
44	8	M	S	90-94	94-98	74-78	98-102	58-60	173-177
46	10	M-L	M	94-98	98-102	78-82	102-106	60-62	177-181
48	12	L-XL	M	98-102	102-106	82-86	106-110	62-64	181-185
50	14	XL-XXL	L	102-106	106-110	86-90	110-114	62-64	181-185
52	16	XXL-3XL	L-XL	106-110	110-114	90-94	114-118	64-66	185-189
54	18	3XL	XL	110-114	114-118	94-98	118-122	64-66	185-189

! AVERTUM TECH-AIR® SHALL BE WORN WITH A TECH-AIR® READY REV'IT! OUTER GARMENT OF THE SAME SIZE OF THE SYSTEM OR WITH ANY REV'IT! OUTER GARMENT THAT IS NOT TECH-AIR® READY PROVIDED THAT THE SIZE OF THE REV'IT! OUTER GARMENT IS ONE SIZE LARGER THAN THE SIZE OF THE SYSTEM OR REGARDLESS OF WHETHER IT IS A REV'IT! OUTER GARMENT OR NOT MEETS THE FOLLOWING CRITERIA: FOR THE CHEST AREA, MEASURE THE CIRCUMFERENCE OF THE CHEST (A) AND THE GARMENT WIDTH ON THE CHEST REGION (A1). THE GARMENT IS COMPATIBLE WITH AVERTUM TECH-AIR® SYSTEM IF $A1 > 0.5 \times A + 12 \text{ CM}$ ($A1 > 0.5 \times A + 4.72 \text{ IN}$) (SEE FIGURE 1 ON THE RIGHT)

! AVERTUM TECH-AIR® SYSTEM MUST ALWAYS BE USED WITH A PROPERLY FITTING OUTER GARMENT TO THE USER'S APPROPRIATE BODY SIZE. USE OF THE SYSTEM INSIDE AN INCORRECTLY SIZED OUTER GARMENT, OR WITH AN OUTER GARMENT THAT IS NOT COMPLIANT WITH THE SIZE CHECK RECOMMENDATIONS ABOVE, MAY RESULT IN THE SYSTEM MALFUNCTIONING OR FAILURE AND INJURY, INCLUDING SEVERE INJURY AND/OR DEATH.

